 


GB

Assembly Instruction

Mini Trampoline 127 x 127

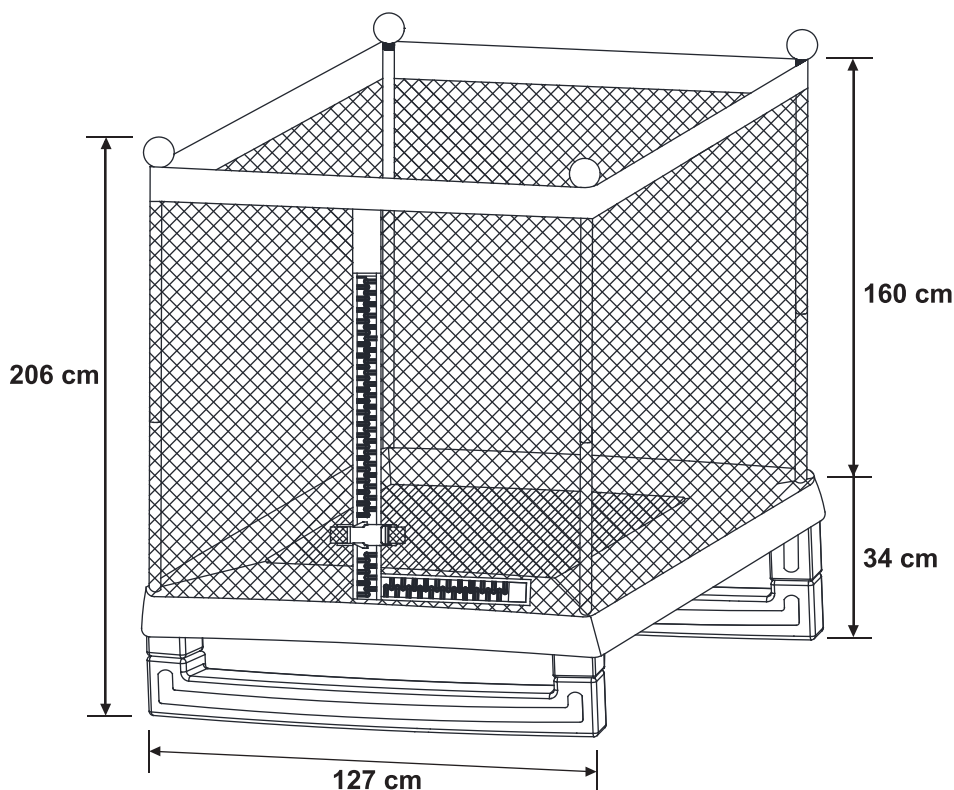

IMPORTANT

Read the following statements and warnings to avoid serious or fatal injury.

Warning.

- Max 50 kg.
- Only for domestic use.
- Outdoor use.
- Only one user. Collision hazard.
- The net should be replaced every year.
- Adult supervision required.
- No somersaults.
- Always close the safety net opening before jumping.
- Read the instructions.
- The trampoline shall be assembled by an adult in accordance with the assembly instructions and then checked before the first use.
- Empty pockets and hands before jumping.
- Always jump in the middle of the mat.
- Do not use when the mat is wet.
- Do not eat while jumping.
- Do not exit by a jump.
- Limit the time of continuous usage (take regular breaks).
- Do not use in strong wind conditions and secure the trampoline.
- Avoid bouncing too high. Stay low until you can control your bounce and repeatedly land in the centre of the trampoline.
- Do not use the trampoline as a springboard to other objects. Use the trampoline only for bouncing.
- Keep objects away that could interfere with the person jumping.
- Do not bounce directly after eating.
- Do not attempt knee drops as these can cause injury.
- Clothing should allow plenty of body freedom. Loose shirts or skirts should be avoided to reduce risk of entanglement.
- Buckles or jewellery should not be worn as these could damage the trampoline bed and cause injury.
- Supervising adults should warn children prior to commencing play on the trampoline NOT to crawl under or try to enter the enclosure whilst the trampoline is in use.
- Parents or supervising adult must ensure children wear appropriate clothing to avoid any potential dangers for the child whilst using the trampoline.

Placement of the trampoline

Do not place the trampoline on a concrete floor or other hard surfaces. The ideal placement is a level, stable surface like a lawn. There must be at least 2 meters of space around the trampoline. Check that there are no wires, tree branches, fences or other possible hazards above and around the trampoline. The trampoline should not be placed near any pools, swings, slides, climbing frames or other obstructive installations. The trampoline is not intended to be buried into the ground.

Weather conditions

The trampoline should not be used when wet. In winter conditions, please disassemble the trampoline and store all fabric parts (mat, foam pad, safety net) inside. In strong wind conditions, disassemble the foam pad and safety net and secure the trampoline to the ground using Ground Stakes/Anchors (sold separately).

How to use

Take it easy at first. Don't try difficult moves.

Do not jump when tired - this increases the risk of injury. Be sure to wear proper shoes, e.g. gym shoes, or be barefoot when jumping.

Never step on the frame pad. It is not constructed to support the weight of a person. Never dismount by jumping off the trampoline. Always climb off. Don't use the trampoline under the influence of drugs or alcohol.

Always have someone else watching while you jump. If you should injure yourself you will have someone to assist you.

Always start your jump at the centre of the mat. If you land more than 30 cm away from the edge of the logo, stop your jump immediately!

Restart your jump at the centre of the mat.

CARE AND MAINTENANCE

This trampoline was designed and manufactured with quality materials and craftsmanship. If proper care and maintenance is provided, it will provide all jumpers with years of exercise, fun, and enjoyment as well as reduce the risk of injury. Please follow the guidelines listed below. Installments of additional accessories must be carried out as per manufacturer's instructions.

This trampoline is designed to withstand a certain amount of weight and use. Please make sure that only one person at any one time uses the trampoline. Jumpers should either wear socks, gymnastics shoes, or be barefoot when using the trampoline. Please be aware that street shoes or tennis shoes should NOT be worn while using the trampoline. In order to prevent the trampoline mat from getting cut or damaged please do not allow any pets onto the mat. Also, jumpers should remove all sharp objects from their person prior to using the trampoline. Any type of sharp or pointed objects should be kept off the trampoline mat at all times. Regularly check that nuts and bolts are securely tightened, since they may come loose over time. Check that all spring-loaded (pit pin) joints are still intact and cannot become dislodged during play; Check all coverings and sharp edges and replace when required Check that mat, padding and enclosure are free from defects.

Always inspect the trampoline before each use for worn, abused or missing parts. A number of conditions could arise that may increase your chances of getting injured. Please be aware of:

- Punctures, holes, or tears in the trampoline mat
- Sagging trampoline mat
- Loose stitching or any kind of deterioration of the mat
- Bent or broken frame parts, such as the legs
- Broken, missing, or damaged springs
- Damaged, missing, or insecurely attached frame pad
- Protrusions of any types (especially sharp types) on the frame, springs, or mat

Note. Sunlight, rain, snow and extreme temperatures reduce the strength of these parts over time.

IF YOU FIND ANY OF THE PREVIOUS CONDITIONS, OR ANYTHING ELSE THAT YOU FEEL COULD CAUSE HARM TO ANY USER, THE TRAMPOLINE SHOULD BE DISASSEMBLED OR SECURED FROM USE UNTIL THE CONDITION (S) HAS BEEN RESOLVED.

Do not modify the trampoline or any of its parts

The net should for safety's sake be replaced every year.

MOVING THE TRAMPOLINE

If you need to move the trampoline, two people should be used. All connector points should be wrapped and secured with weather resistant tape, such as duct tape. This will keep the frame intact during the move and prevent the connector points from dislocating and separating. When moving, lift the trampoline slightly off the ground and keep it horizontal to the ground. For any type of other move, you should disassemble the trampoline.

Keep this instruction manual.

 
 
 
 
Assembly

Please read the assembly instructions fully before starting to assemble the trampoline.

On occasion it is advisable to have two people assembling it together.


The reference No. of each part will be used in the instructions to guide you.

Parts list

Parts No.	Parts	Description	Quantity
1		Trampoline Mat, stitched with Triangle-Rings and Safety Pad	1
2		Top Rail	4
3		Corner Top Rail with Socket	4
4		Plastic Vertical Leg Extension	4
5		Plastic Horizontal Leg Base	2
6		Plastic Flat Plate	4
7		R-Hooked Galvanized Springs (15N 3 1/2")	36
8		Spring Loading Tool	1
9		Upper Frame Tube with Foam	4
10		Lower Frame Tube with Foam (with one hole)	4
11		Tube Cap	4
12		Enclosure Netting	1
13		Screw	4
14		Arc Washer	8
15		Spring Washer	4
16		Cap Nut	4
17		Allen Wrench	1
18		Wrench	1
19		Self-locking Screw	4


Step 1

 Start by attaching the "Lower Frame Tube with Foam (with one hole)" **10** to the socket on the "Corner Top Rail with Socket" **3** as shown, with the narrow end of **10** facing up.

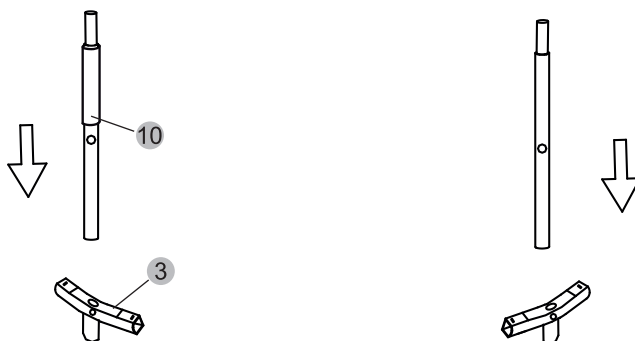

Secure the "Lower Frame Tube with Foam (with one hole)" **10** and "Corner Top Rail with Socket" **3** with the "Screw" **13**, "Arc Washer" **14**, "Spring Washer" **15** and "Cap Nut" **16** as shown in the enlarged diagram.

 
Repeat this step in the same manner for all four sides.

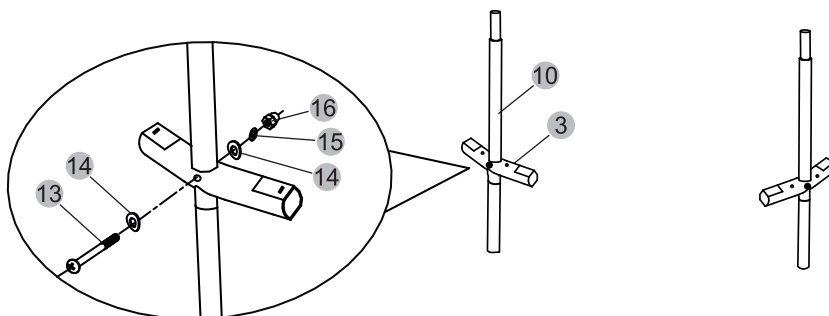

Step 2

Insert these assembled parts into the hole on the “Plastic Horizontal Leg Base” 5 and “Plastic Vertical Leg Extension” 4 and secure by using “Plastic Flat plate” 6 as shown.

 
Note: Only insert 1/3 of the plastic thread to the lower frame tube. Do not tighten “Plastic Flat Plate” 6 at this stage.

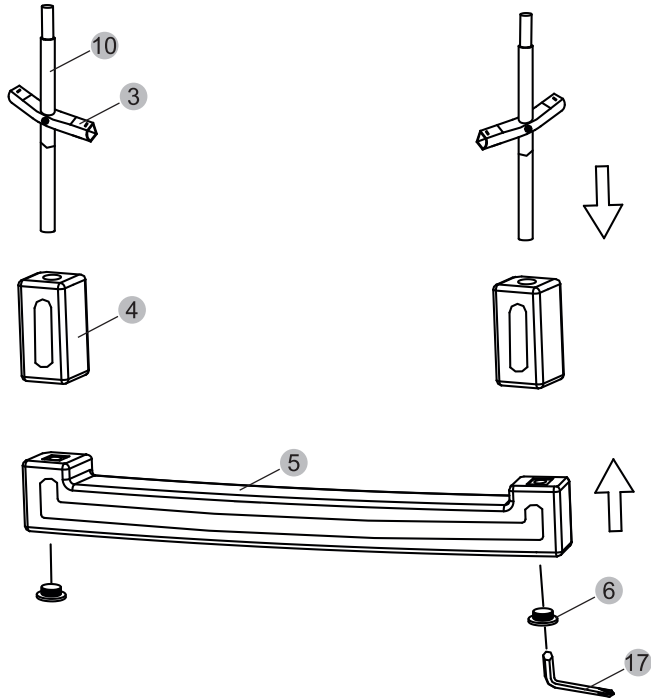

Step 3

Slide the “Top Rail” 2 to the “Corner Top Rail with Socket” 3 as shown. To connect the parts, simply slide a section (male) of tubing that is smaller on one end into the adjacent section (female) that has a larger opening. Holes facing up.

 Note: Please make sure the curve point of the plastic horizontal leg base is facing outward.

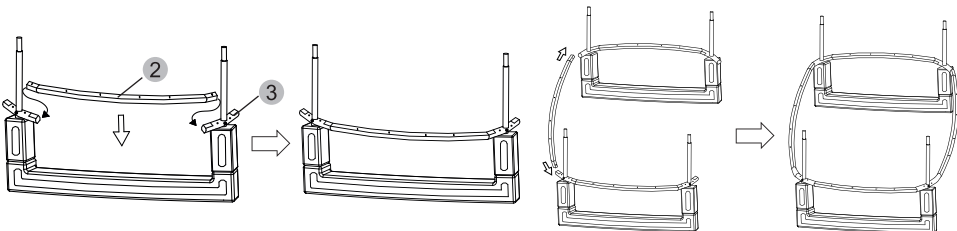


Now, go back to screw the other 2/3 plastic thread of the “Plastic Flat Plate” 6 to complete the support assembly. Do not over tighten.

Step 4

Cover the trampoline frame tubes by pulling the "Trampoline Mat, stitched with Triangle-Rings and Safety Pad" ① downward. The four holes at the corner of the trampoline mat should be inserted to the "Lower Frame tube with Foam (with one hole)" ⑩.

 Note: Take out the foam before inserting the Safety Pad and put it back again afterwards.

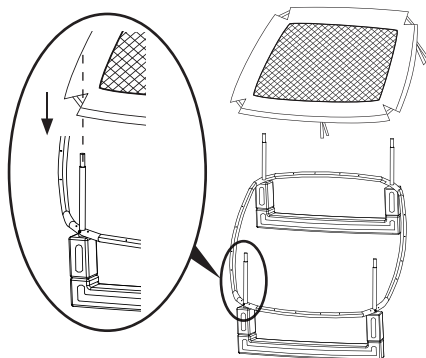


Step 5

There are a total of 36 Triangle-Rings sewn on the mat and 36 holes on the Top Rail Frame. Select a point to start. Call this 1. Use the special Spring Loading Tool to attach the "R-Hooked Galvanized Spring" ⑦.

The "R" hook end attaches to the Triangle-Ring on the mat as shown. Make sure that the spring hooks on completely, otherwise it may come loose during jumping. When doing this you should wear protective gloves to avoid injuries.


When the first spring is in place continue with the next in the numerical order shown on the picture. When you have completed number 12 you can attach the remaining springs in any order.

 It is important to follow these instructions carefully to get the right tension for the trampoline mat. If you do not follow this pattern it will be very difficult to assemble the trampoline mat correctly.

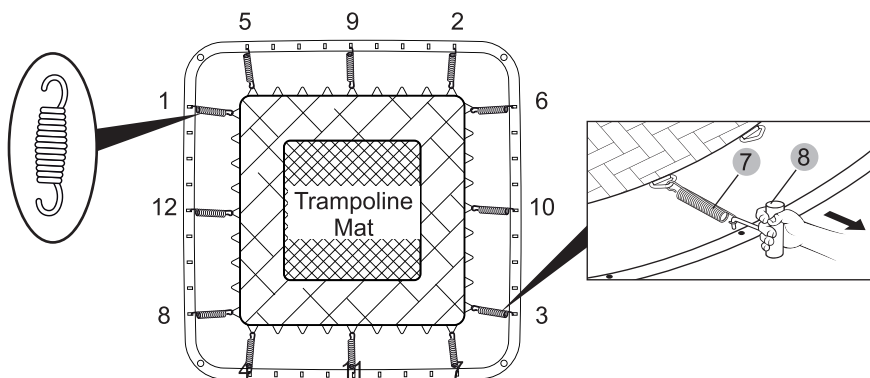


Step 6

 Flip down the “Safety Pad stitched with the trampoline mat” ① and tie the elastic straps over the frame as shown. Make sure safety pad covers the frame.

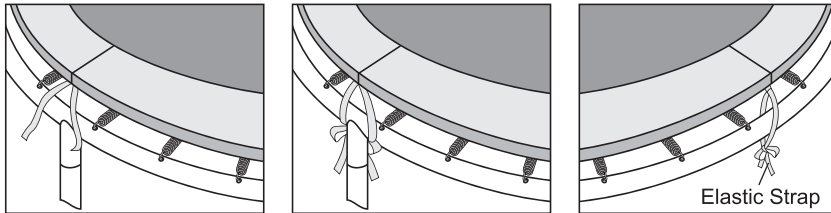


Step 7 (requires 2 persons)

 Attach the “Upper Frame Tube with Foam” ⑨ to “Lower Frame Tube with Foam (with one hole)” ⑩ as shown. Do this for all of the tubes. Note that the little drilled hole on ⑨ should be at the top end.

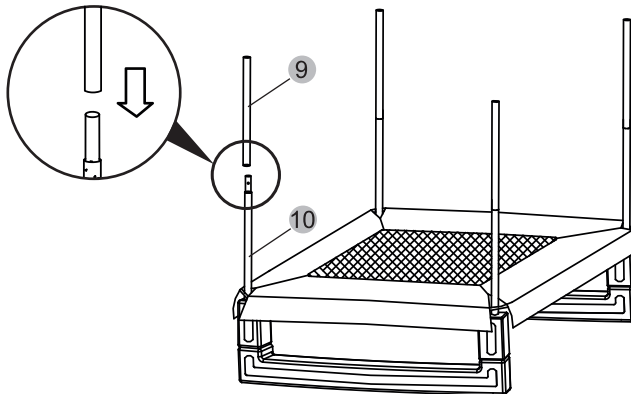


 Then place the elastic strap sewn on the top corner of the “Enclosure Netting” ⑫ to the “Upper Frame Tube with foam” ⑨. With someone holding the sleeve on top of the Enclosure Netting, pull it downward evenly as shown. Remember to open the zipper fully before this step.

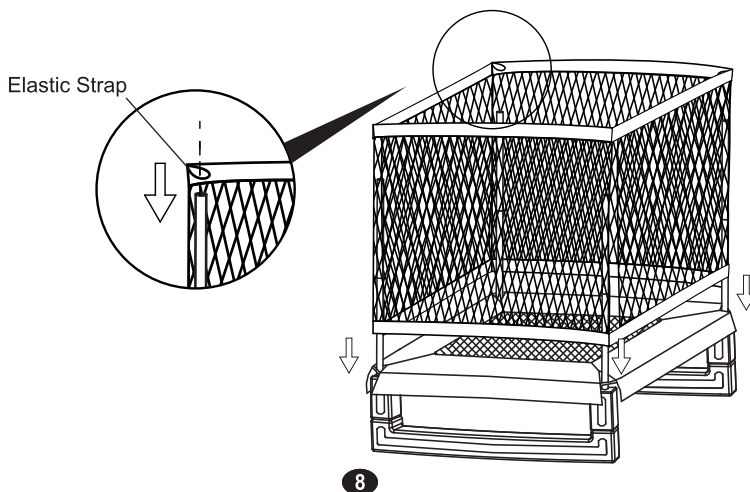

Step 8

 Attach the "Tube Cap" 11 to the hole on the "Upper Frame Tube with Foam" 9 and secure by using "Self-locking Screw" 19. Repeat in the same manner for all Tube Caps.

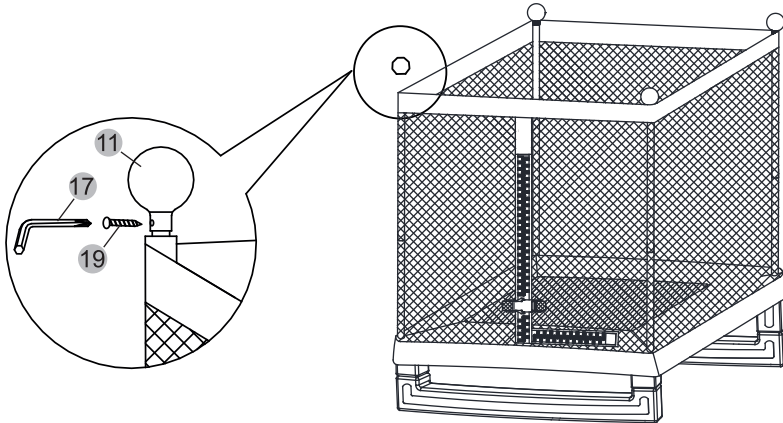


Step 9

Tie the elastic straps sewing on the "Enclosure Netting" 12 to the Trampoline Top Rail frame. Pull the zipper of Enclosure Netting at the door which should be located on top of the support assembly. Then secure the door with the hook.

Perform a complete inspection of the trampoline to make sure all parts are assembled and attached properly.

Your trampoline is now complete. Remember to be careful when jumping.

 
To disassemble, simply follow assembly *Step 1* through *Step 9* in reverse order.

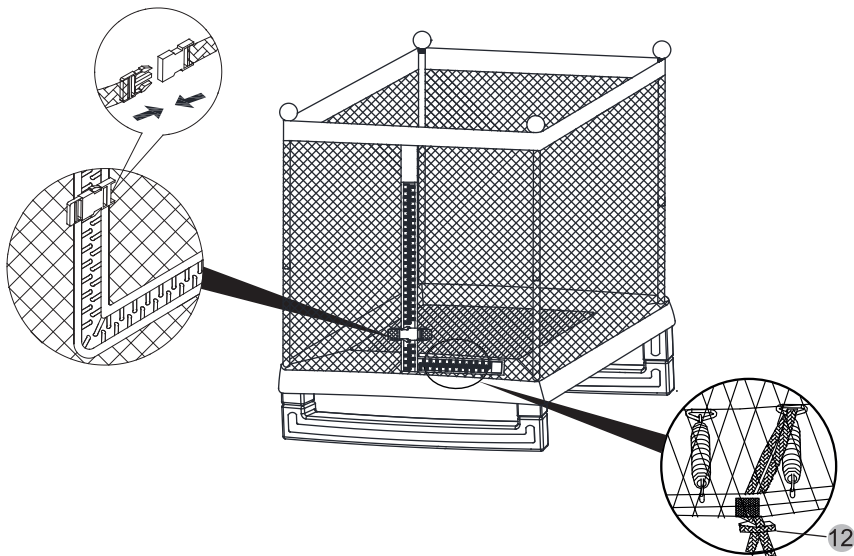



DK

 Samlevejledning Minitrampolin 127 x 127

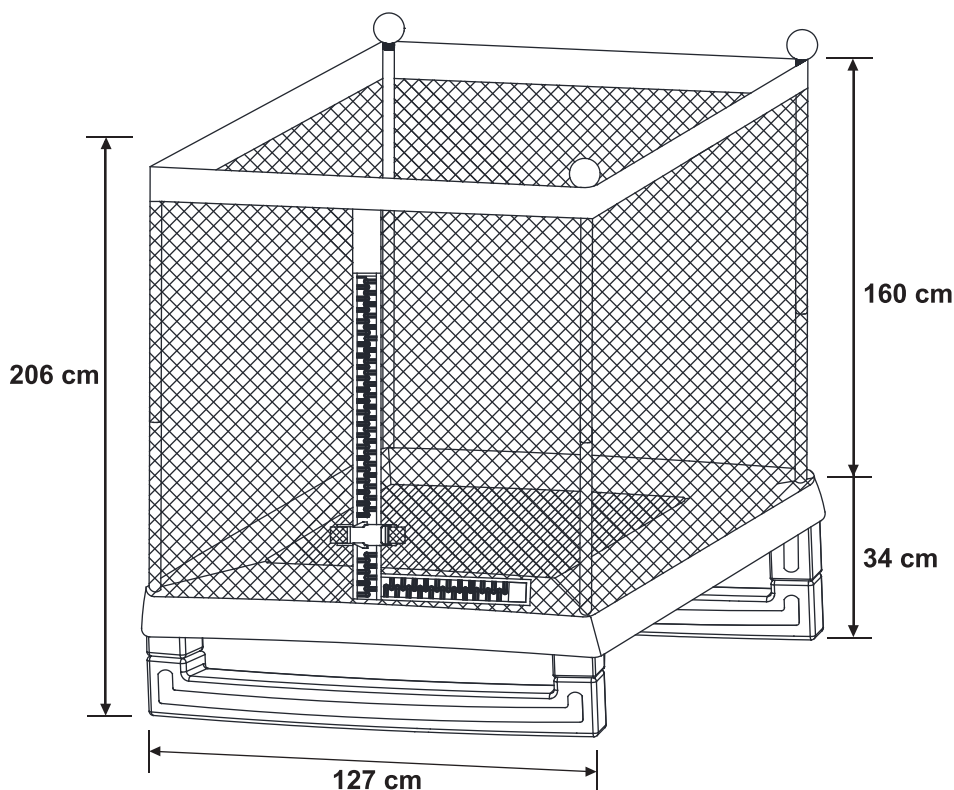

VIGTIGT

Læs følgende erklæring og advarsler for at undgå alvorlige eller fatale ulykker.

Advarsel.

- Maks. 50 kg.
- Kun til privat brug.
- Til udendørs brug.
- Kun en bruger ad gangen. Risiko for kollision.
- Nettet bør udskiftes hvert år.
- Opsyn af en voksen er påkrævet.
- Ingen kolbøtter/saltomortaler.
- Luk altid sikkerhedsnettets åbning, inden du begynder at hoppe.
- Læs vejledningen.
- Trampolinen skal samles af en voksen ifølge samlevejledningen og derefter tjekkes før brug.
- Tøm lommerne, og hav ikke noget i hænderne.
- Hop altid på midten af dugen.
- Må ikke bruges, hvis dugen er våd.
- Spis ikke, når du hopper
- Hop aldrig ned fra trampolinen.
- Benyt trampolinen i begrænset tid (hold jævnlige pauser).
- Må ikke bruges i stærk blæst. Fastgør trampolinen.
- Lad være med at hoppe for højt. Hop lavt, indtil du kan holde balancen og gentagne gange lander i midten af trampolinen.
- Brug ikke trampolinen som springbræt til andre genstande. Brug kun trampolinen til at hoppe i.
- Hold genstande, der kan komme i vejen for den, der hopper, på afstand.
- Lad være med at hoppe lige efter, at du har spist.
- Prøv ikke at lande på knæene, da det kan forårsage skade.
- Din påklædning bør give dig god bevægelsesfrihed. Løse bluser eller kjoler bør undgås, så du ikke risikerer at blive viklet ind i tøjet.
- Tag bæltespænder og smykker af, da de kan beskadige dig selv og trampolinen.
- Voksne, der holder opsyn, bør advare børn før brug af trampolinen om IKKE at kravle under den eller prøve at gå op på den, mens den er i brug.
- Forældre eller voksne, som holder opsyn, skal sørge for, at børnene bærer passende beklædning, når de hopper i trampolinen, for at undgå risici for skader.

Placering af trampolinen

Placer aldrig trampolinen på et cementgulv eller andre hårde flader. Den bedste placering er på en jævn og stabil overflade som for eksempel en græsplæne. Der skal være et frit område på mindst to meter omkring trampolinen. Sørg for, at der ikke er nogen ledninger, grene, hegn eller andre mulige farer over og rundt om trampolinen. Trampolinen må ikke placeres tæt på pools, gynger, rutsjebaner, klatrestativer eller andre installationer, der udgør en risiko. Denne trampolin er ikke beregnet til nedgravning.

Vejrforhold

Trampolinen må ikke bruges, når den er våd. Skil trampolinen ad om vinteren, og opbevar alle stofdele (dug, skumkanter og sikkerhedsnet) indendørs. Fjern skumkanter og sikkerhedsnet ved stærk blæst, og fastgør trampolinen til jorden med plækker/jordspyd (sælges separat).

Vejledning

Start langsomt. Forsøg ikke at lave svære øvelser.

Hop ikke i trampolinen, når du er træt. Det øger risikoen for skader. Sørg for at bære passende fodtøj, f.eks. gymnastiksko, eller hop med bare fødder.

Træd aldrig på sikkerhedsbetrækket. Det er ikke konstrueret til at kunne bære en persons vægt. Når du skal ned fra trampolinen, må du aldrig hoppe. Kravl altid af. Hop aldrig i trampolinen, hvis du har indtaget stoffer eller alkohol.

Der skal altid være andre til stede, når du hopper i trampolinen. Så er der nogen til at hjælpe dig, hvis du skulle komme til skade.

Begynd altid med at hoppe midt i cirklen. Hvis du lander mere end 30 cm fra kanten af logoet, skal du omgående holde op med at hoppe!

Begynd at hoppe på midten af dugen igen.

PLEJE OG VEDLIGEHOLDELSE

Trampolinen er designet og fremstillet af kvalitetsmaterialer og udsøgt håndværk. Ved korrekt vedligeholdelse vil den give brugerne mange års træning, sjov og glæde, samtidig med at risikoen for skader vil være mindre. Følg vejledningen nedenfor. Montering af yderligere tilbehør bør ske i henhold til leverandørens vejledning.

Trampolinen er designet til at kunne tåle en bestemt vægt og belastning. Sørg for, at kun én person bruger trampolinen ad gangen. Brugerne bør enten bruge strømper, gymnastiksko eller hoppe i bare fødder, når de bruger trampolinen. Udendørssko eller sportssko bør IKKE bæres, når trampolinen bruges. For at undgå beskadigelse eller huller i trampolindugen bør kæledyr ikke træde på dugen. Brugerne skal også fjerne skarpe genstande, som de måtte have på sig, før de bruger trampolinen. Der bør ikke medtages nogen former for skarpe eller spidse genstande, når trampolinen bruges. Tjek med jævne mellemrum, at skruer, møtrikker og bolte er strammet godt, da de vil løsne sig under brug. Sørg for, at alle fjederbelastede samlinger (fjederpinde) er intakte og ikke kan løsne sig under brug. Tjek alle beskyttelsesdele for skarpe kanter, og erstæt dem, hvis det er nødvendigt. Sørg for, at dug, skumkanter og tilbehør ikke er defekte.

Undersøg altid trampolinen for slitage, forkert brug eller manglende dele før brug. Der kan opstå en række situationer, der kan øge din risiko for at komme til skade. Vær opmærksom på:

- revner eller huller i trampolindugen
- sunket trampolindug
- løse sting eller andre former for ødelæggelse af dugen
- bukkede eller knækkede rammedele, f.eks. på trampolinenes ben
- ødelagte, manglende eller beskadigede fjedre
- ødelagte, manglende eller forkert monteret sikkerhedsbetræk
- fremspring af enhver art (især skarpe) på rammen, fjedre eller dugen

Bemærk. Sol, regn, sne og ekstreme temperaturer nedsætter delenes holdbarhed.

HVIS DU MENER, AT DISSE FORHOLD ELLER ANDET KUNNE FORÅRSAGE PERSONSKADE FOR BRUGERNE, BØR TRAMPOLINEN SKILLES AD ELLER SIKRES MOD BRUG, INDTIL FEJLEN(E) ER BLEVET UDBEDRET.

Foretag ikke ændringer af trampolinen eller nogen af delene

Af sikkerhedshensyn bør sikkerhedsnettet udskiftes hvert år

FLYTNING AF TRAMPOLINEN

Det kræver to personer at flytte trampolinen. Alle fæstningspunkter bør være sikret med vejrbestandig tape, såsom klæbetape. Dette vil holde rammen intakt, når den flyttes, og forhindre, at fastgørelsespunkterne ikke flytter sig eller går løs. Løft trampolinen lidt fra jorden for at flytte den, og hold den vandret med jorden. Trampolinen bør skilles ad ved al anden form for flytning.

 
 
Gem denne vejledning.

SAMLEVEJLEDNING

Læs samlevejledningen omhyggeligt, før du begynder at samle trampolinen. Det anbefales, at to personer samler trampolinen.


Hver dels referencenummer vil blive brugt her i vejledningen som en hjælp til dig.

Øversigt over dele

Delnr.	Dele	Beskrivelse	Antal
1		Trampolindug med påsyede trekantringe og sikkerhedspude	1
2		Topramme	4
3		Hjørnetopramme med holder	4
4		Opretstående benforlænger af plastik	4
5		Liggende trampolinben af plastik	2
6		Flad plastplade	4
7		Galvaniserede fjedre med R-krog (15N 3 1/2")	36
8		Fjedermonteringsværktøj	1
9		Øvre rammerør med skum	4
10		Nedre rammerør med skum (med 1 hul)	4
11		Rørhætte	4
12		Sikkerhedsnet	1
13		Skrue	4
14		Buet spændeskive	8
15		Fjderskive	4
16		Hættemøtrik	4
17		Unbrakonøgle	1
18		Skruenøgle	1
19		Selvlåsende skrue	4


Trin 1

 Monter først det nedre rammerør 10 på holderen på hjørnetoprammen 3 som vist, med den tynde ende af 10 pegende opad.

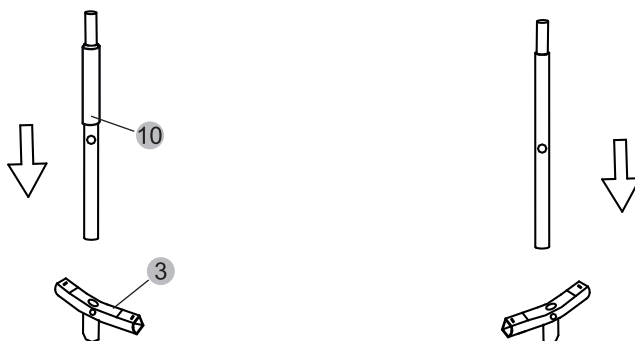

Fastgør det nedre rammerør 10 og hjørnetoprammen 3 med skruen 13, den buede spændeskive 14, fjederskiven 15 og hættetrækken 16 som vist på den forstørrede tegning.

 
Gentag dette trin for alle 4 sider.

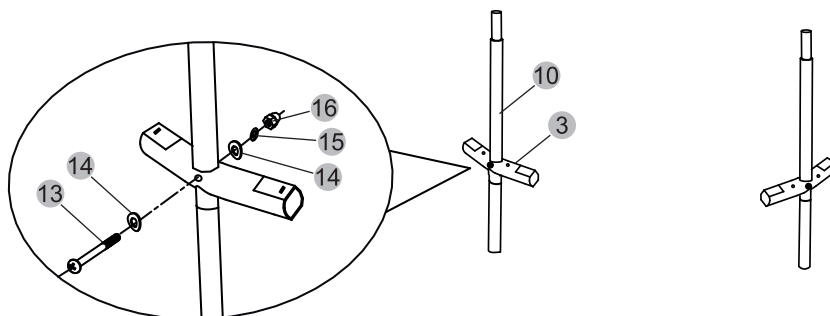

Trin 2

Sæt derpå de samlede dele i hullet på de liggende trampolinben 5 og de opretstående benforlængere 4. Fastgør dem med den flade plastplade 6 som vist.

 
Bemærk: Indfør kun 1/3 af gevindet i det nedre rammerør. Stram ikke den flade plastplade 6 på dette tidspunkt.

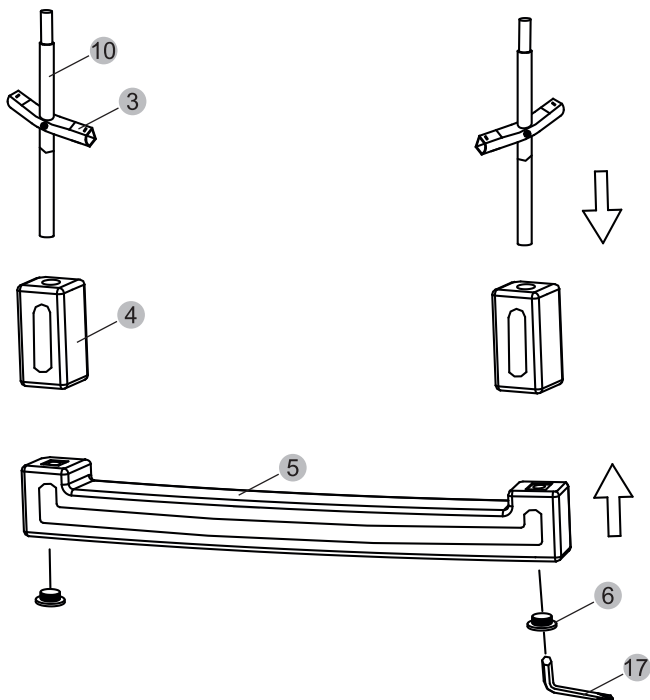

Trin 3

Skub toprammen 2 på hjørnetoprammen 3 som vist. Delene sættes sammen ved at sætte et rør som er mindre end det andet, fast i røret, som er bredere i enden. Hullerne skal vende opad.

 Bemærk: Sørg for, at det kurvede punkt på de liggende trampolinben vender udad.

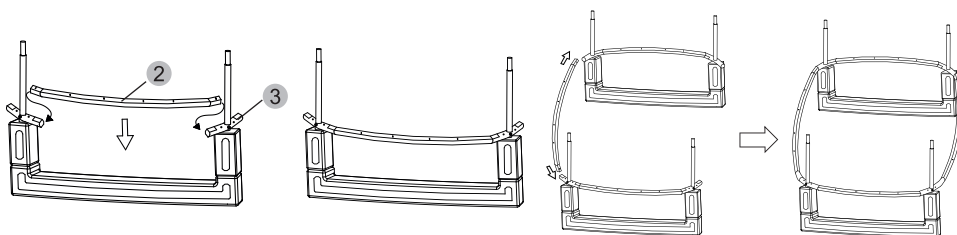


Skru nu den resterende 2/3 af gevindet på den flade plastplade fast 6 for at afslutte monteringen af støttesamlingen. Stram ikke for meget.

Trin 4

Dæk rammerørene på trampolinen ved at trække trampolindugen **1** nedad. De fire huller i hjørnet af trampolindugen skal sættes fast på det nedre rammerør **10**.

 Bemærk: Tag skummet ud af sikkerhedspuden, før den installeres, og put det ind igen bagefter.

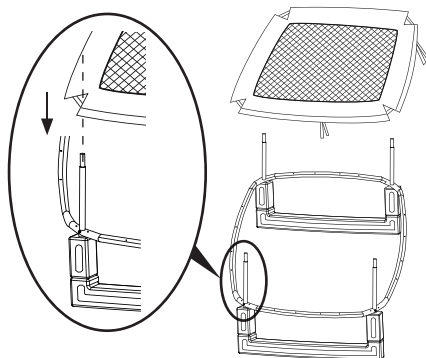


Trin 5

Der er 36 trekantede ringe syet fast på dugen og 36 huller på toprammen. Vælg et startpunkt. Kald dette "punkt 1". Brug fjedermonteringsværktøjet til at sætte de galvaniserede fjedre med R-krog på **7**.

R-kroen sættes fast på trekantringen på dugen som vist. Sørg for, at fjederen sidder ordentligt fast, ellers kan den løsne sig, når du hopper i trampolinen. Du bør have beskyttelseshandsker på for at undgå at komme til skade.


Når den første fjeder er på plads, skal du fortsætte i numerisk rækkefølge som vist på billedet. Når du er færdig med nummer 12, kan du fastgøre de resterende fjedre i tilfældig rækkefølge.

 Det er vigtigt at følge vejledningen nøje for at få spændt trampolindugen korrekt. Hvis du ikke følger dette mønster, vil det blive meget svært at montere trampolindugen korrekt.

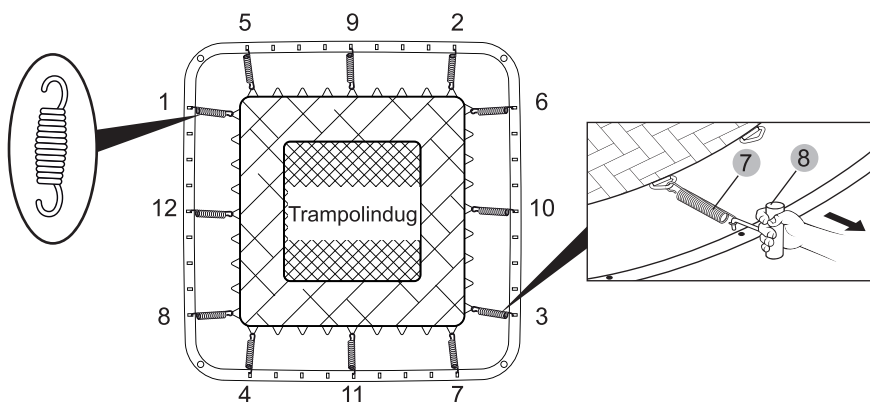


Trin 6

 Slå sikkerhedspuden **1** ned, og stram elastikstropperne over rammen som vist. Sørg for, at sikkerhedspuden dækker rammen.

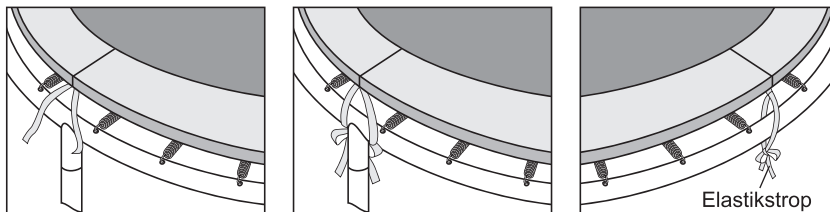


Trin 7 (kræver 2 personer)

 Sæt det øvre rammerør **9** fast på det nedre rammerør **10** som vist. Gør dette på alle rørene. Bemærk, at det lille hul på **9** skal være i toppen.

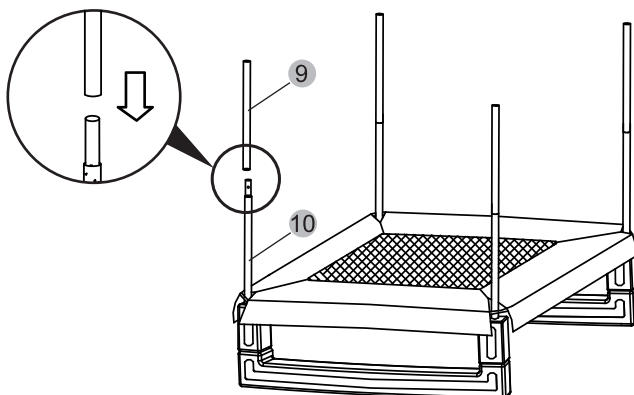


 Sæt derefter elastikstroppen, der er syet fast i det øvre hjørne af sikkerhedsnettet **12** på det øvre rammerør **9**. Få en anden person til at holde fast øverst på sikkerhedsnettet, og træk det jævnt nedad som vist. Husk at åbne lynlåsen helt inden dette trin.

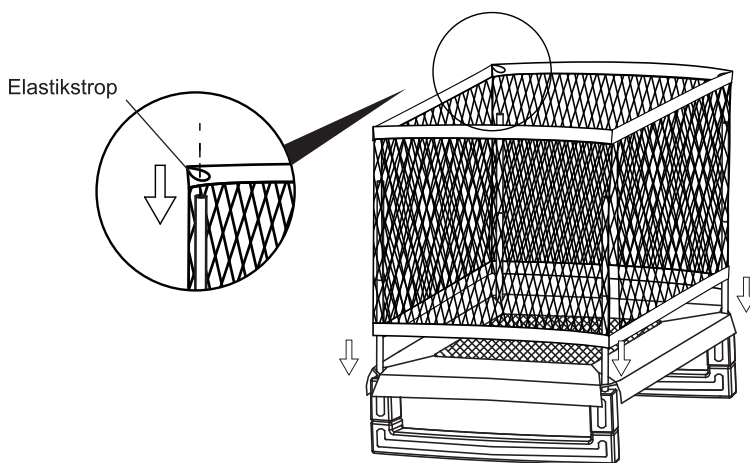

Trin 8

 Sæt rørhætten **11** fast på hullet på det øvre rammerør **9**, og fastgør den med den selvvlåsende skrue **19**. Gør dette med alle rørhætterne.

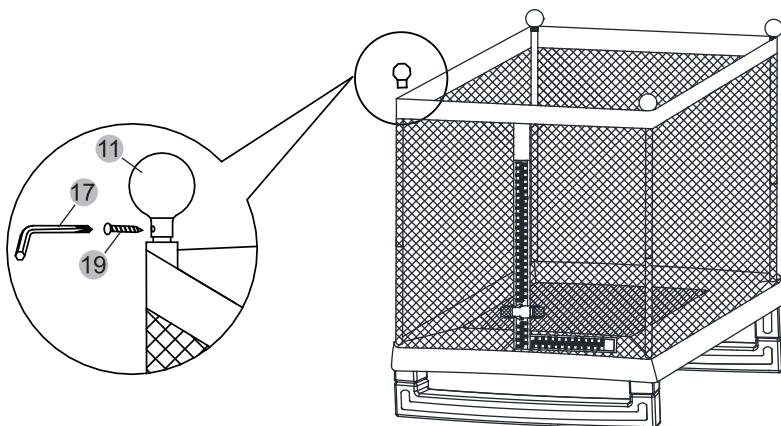

Trin 9

Bind de påsyede elastikstropper på sikkerhedsnettet **12** fast på trampolinens topramme. Træk i lynlåsen på sikkerhedsnettet ved døren, der bør sidde oven over støttesamlingen. Sæt døren fast med krogen.

Undersøg hele trampolinen for at sikre dig, at alle dele er korrekt monteret og fastgjort.

Din trampolin er nu klar til brug. Husk at være forsigtig, når du hopper.

Når du skal afmontere trampolinen, skal du følge Trin 1 til Trin 9 i modsat rækkefølge.

